

## **Programming the 2410AD      Alcatel 2410 Autodial**

Locate the 2 small holes in the bottom front of the phone.  
Button 'b' is closest to the handset connector

To enter programming mode on the 2410AD

Connect telephone to a line and keep the phone 'on-hook'

With a paper clip hold button 'b' down and go 'off-hook'

Wait 1 second, then release button 'b'

Confirmation tone will be heard (2 beeps)

Ignore any error tones from the network

Push button 'a' the correct number of times corresponding to the first digit of the number you want to store. (see table below)

To store the digit push button 'b'

Push button 'a' the correct number of times corresponding to the next digit of the number you want to store.

To store the digit push button 'b'

Repeat the last 2 steps until all digits have been entered

Push button 'b' a second time to store and exit program mode. The number stored will be dialled to confirm entry

Number to dial      Number of time to push button 'a'

1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	10
*	11
#	12
pause	13