 


Australia

# SYMPHONY

Clock Radio Telephone

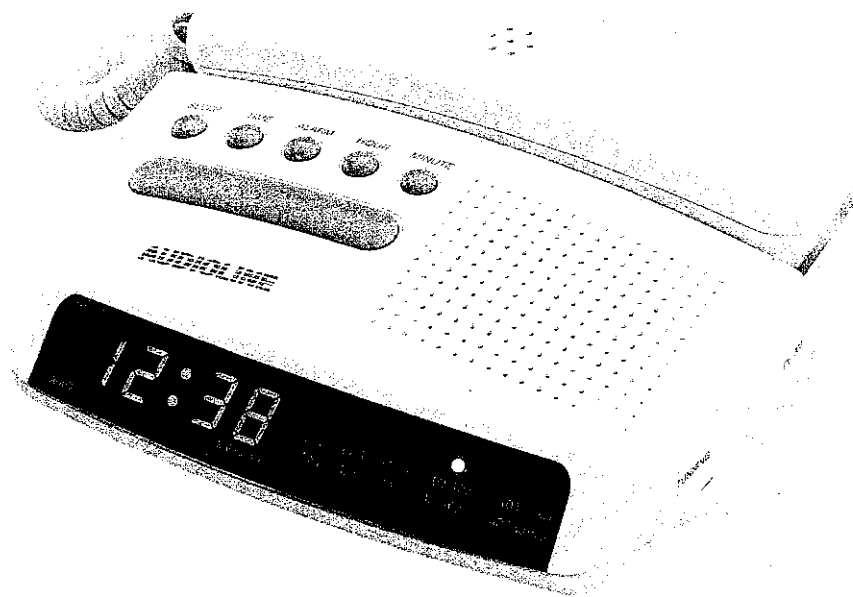

User guide

**AUDIOLINE®**

LIST OF CONTENTS

**The telephone** ..... 2

    Connection ..... 3

    To make a call ..... 3

    Last number redial ..... 3

    Volume control ..... 3

    Mute button ..... 3

    Adjustable ring signal ..... 4

    Additional network services ..... 4

**Clock Radio** ..... 5

    The clock radio functions ..... 6

    Set time ..... 6

    Set alarm ..... 6

    Sleep function ..... 6

    Dimmer ..... 7

    Battery ..... 7

**Other** ..... 8

    Troubleshooting ..... 8

 
    Warning ..... 8

    Cleaning ..... 8

    REN ..... 8

    Guarantee ..... 9

## TELEPHONE

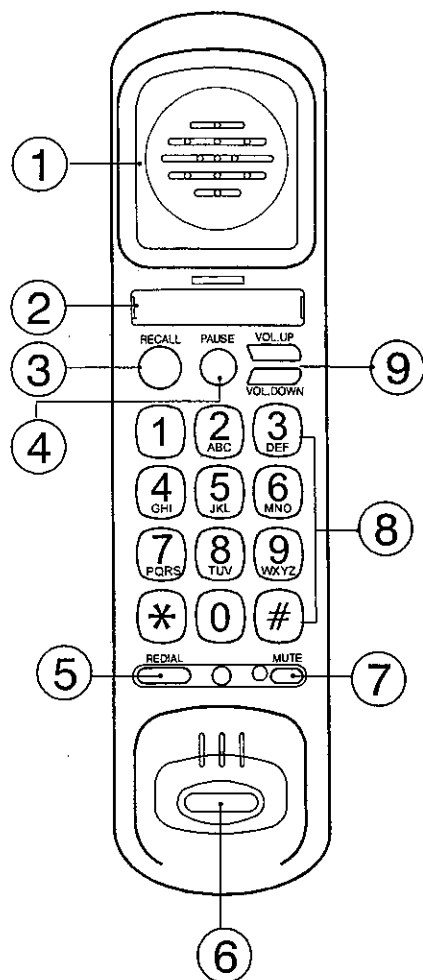

- 1 Earpiece
- 2 Phone number label
- 3 Recall button
- 4 Pause button
- 5 Last number redial

- 6 Hook switch
- 7 Mute button & indicator
- 8 Keypad digits 0-9, \*, #
- 9 Volume control

## CONNECTION

- Connect the curly cord to the base and the handset
- Connect the line cord to the wall socket.
- Lift the handset and check for dial tone

**WARNING:** This equipment should be installed near to a mains socket, which is easily accessible.

## TO MAKE A CALL

- Lift the handset and wait for dial tone
- Dial the phone number with the keypad digits
- Finish the call by replacing the handset..

Lifting the handset when the radio is on will automatically mute the radio until the handset is replaced.

## LAST NUMBER REDIAL

If the number you called is busy or if you want to call the previous number again, just press the [ REDIAL ] button (item 5 on diagram).

- Lift the handset.
- Press the [ REDIAL ] button
- The phone will now dial the number automatically.

## VOLUME CONTROL

The volume control can adjust the level of the earpiece by 6 levels. Press the [VOL. ▲] button to increase and the [VOL. ▼] to decrease.

## MUTE BUTTON

If you wish to converse with a third party privately simply press the [ MUTE ] button (item 7 on diagram). Press the [ MUTE ] again to continue the conversation.

### ADJUSTABLE RING SIGNAL

This telephone has programmable ringer selection. You can select three levels of three types of ring signal and ringer off.

- Lift the handset (ignore network tones)
- Press [MUTE] button
- Press [#] button
- Select required ring signal by pressing buttons 0-9 as per table below.
- Replace the handset.
- The ring signal is now set.

 
Keypad digit	Melody type	Level
1	Melody A	Low
2	Melody A	Normal
3	Melody A	High
4	Melody B	Low
5	Melody B	Normal
6 (factory setting)	Melody B	High
7	Melody C	Low
8	Melody C	Normal
9	Melody C	High
0	Off *	-

\* If digit 0 is selected, the ring signal will be turned off until the handset is picked up. After that, the ring signal goes back to the previous setting.

### ADDITIONAL NETWORK SERVICES

Optional Network services such as call waiting etc. can be accessed via the [RECALL] button (item 3 on diagram). A subscription may apply. For further information, contact your Network operator.

### CLOCK RADIO

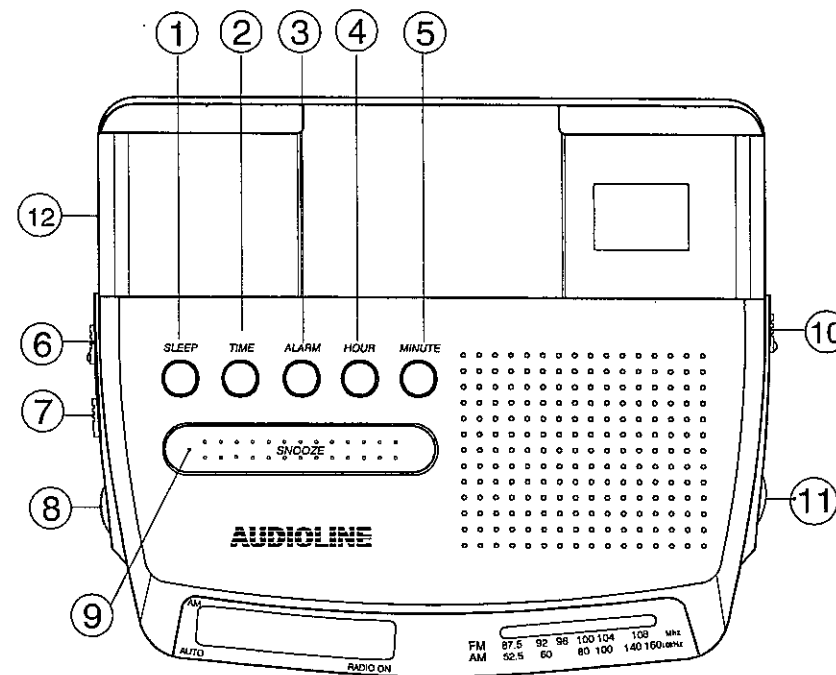

- |                                   |                                       |
|-----------------------------------|---------------------------------------|
| 1 SLEEP-button for sleep function | 7 DIMMER-switch for adjusting display |
| 2 TIME-button to set time         | 8 Volume control                      |
| 3 ALARM-button to set alarm time  | 9 SNOOZE-button                       |
| 4 HOUR-button to set hour         | 10 FM/AM switch                       |
| 5 MINUTE-button to set minute     | 11 TUNING control                     |
| 6 RADIO-switch for off/on/auto    | 12 RADIO/BUZZER selector switch.      |

## THE CLOCK RADIO FUNCTIONS

- Connect the power cord to the wall socket. [MUTE]
- The wire next to the power cord is the antenna for the radio
- Turn on the radio by selecting "ON" with the "RADIO" switch (item 6 on diagram).
- Tune radio to desired station by using FM/AM switch (item 10 on diagram) and the tuning knob (item 11 on diagram)
- Turn off the radio by selecting "OFF" with the "RADIO" switch (as above)

The radio will be temporarily muted if you lift the handset when the radio is on.

## SET TIME

- Press and hold the "TIME" button.
- At the same time press the "HOUR" button to set hour, then the "MINUTE" button to set minutes.
- Release the "TIME" button when you have set the right time .

## SET ALARM

- Press and hold the "ALARM" button
- At the same time press the "HOUR" button to set hour, then the "MINUTE" button to set minutes
- Release the "ALARM" button then you have set the right time for the alarm
- Activate the alarm by setting the "RADIO" switch to "AUTO" (item 6 on diagram)
- You can decide to wake to either radio or buzzer by selecting "RADIO" or "BUZZER" with the switch under the unit (\* on diagram).
- The alarm can be turned off by using the "RADIO" switch or with the "SNOOZE" button
- When using the "SNOOZE" button, the alarm will be turned off for 8-9 minutes before coming on again

## SLEEP FUNCTION

With the sleep function you can set the radio to be on for up to 1 hour and 59 minutes, after the selected time the radio will automatically turn off.

- Press the "SLEEP" button, the radio will turn on and the display will show 00:59
- Press the "HOUR" button to increase the time to 01:59
- Press the "MINUTE" button to decrease the radio on time

If you wish to turn off the radio before the set time, press the "SNOOZE" button.

## DIMMER

The "DIMMER" switch allows you to select between high (HI) and low (LOW) display intensity.

## BATTERY

A 9-volt battery can be installed to enable time and alarm settings to be retained in the event of a power failure.

**WARNING:** The telephone line must be disconnected before installing or replacing the 9V battery.

## TROUBLESHOOTING

### NO DIAL TONE

Try the phone in a known good socket to establish whether the fault is with the phone or the line.

### PHONE DOES NOT RING

Lift and replace handset to reset the ringer to the default setting.

## WARNING

It is recommended that you disconnect your telephone during a thunderstorm as you can get a shock from your telephone (and other electrical appliances). We recommend you follow these simple precautions during a thunderstorm:

- Do not use your telephone unless the call is urgent.
- If you must use your telephone, make the call as brief as possible and keep clear of electrical equipment and metal fixtures.
- Do not stand in bare feet on uncovered concrete floors.
- Do not touch brick or concrete walls.

Note: Do not install your telephone in damp or high humidity locations, such as a laundry or bathroom. If any damage is caused by such elements it is not covered by the manufacturers warranty.

## CLEANING

The casing should be cleaned by wiping with a damp cloth.

- Do not use abrasives, solvents or spray polish that may enter through holes in the earpiece and mouthpiece and cause damage.
- Do not place the telephone in direct sunlight or use in extreme humidity.
- Clean the display with a soft dry cloth. Don't push on the display, it can be damaged.

## REN

The REN number of the Audioline Symphony is 1. The REN number (Ringer Equivalence Number) is designated to represent the amount of power that a telephone draws from the telephone line. Most normal exchange lines have a REN capacity of 3. If you wish to connect any other equipment to the line, simply add up the REN numbers of each piece and ensure that the total does not exceed 3. If you exceed 3, one telephone may not ring.

## GUARANTEE

If you believe your Audioline Symphony is malfunctioning, please consult the troubleshooting section and ensure that you have followed the instructions in this manual carefully.

The Audioline Symphony is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault during this period, please return it with a copy of the purchase receipt to:

DORO Australia Pty Ltd  
13 Columbia Way,  
Norwest Business Park  
Baulkham Hills NSW 2153  
Ph: (02) 8853-8444 Fax: (02) 8853-8489

Audioline products are distributed in New Zealand by Atlas Gentech. For enquiries and assistance call their Consumer Helpline (Toll Call) 0900 50025.

NOTE: The guarantee does not extend to damage caused by misuse, negligence, excessive voltage, faults on the telephone line or lightning. This guarantee in no way affects your statutory rights. Audioline is the trademark of DORO AB.