

Australia


TEL35

'Hands-free' Speakerphone
with LCD Display

User guide

AUDIOLINE®

FUNCTIONS

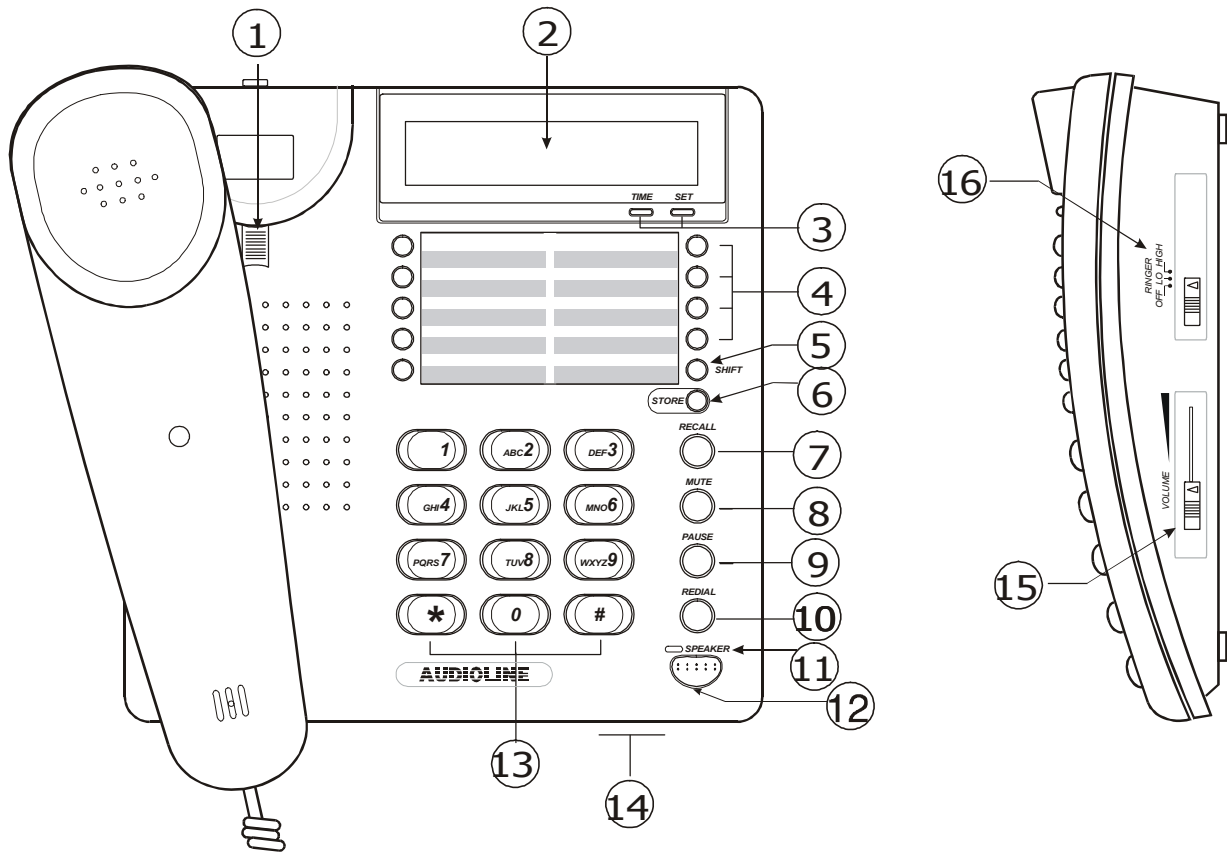

- | | |
|------------------------|---------------------------------|
| 1 Wall mount clip | 11 Speaker LED |
| 2 LCD Display | 12 Speaker button |
| 3 Time and Set buttons | 13 Dial buttons, 0-9, *, # |
| 4 Memory buttons | 14 Microphone |
| 5 Shift button | 15 Volume Control |
| 6 Store button | 16 Ringer Switch (Off/Low/High) |
| 7 Recall button | |
| 8 Mute button | |
| 9 Pause button | |
| 10 Redial button | |

ASSEMBLY INSTRUCTIONS

PARTS LIST

- 1 - TEL35 Telephone
- 1 - Telephone Handset
- 1 - Line cord

BATTERY

Two “AAA” 1.5V batteries (not supplied) must be fitted before connection to the telephone network. This will ensure full function of the LCD display and memory retention in the event of the telephone being disconnected from the Network.

- # Remove screw from battery compartment on base.
- # Insert batteries, observing correct polarity.
- # Replace cover and retaining screw.
- # The clock will commence at 12-00-00 (see page 6 for setting the current time).

NOTE: 1. Always disconnect the telephone from the line when replacing batteries. 2. Dispose of used batteries safely and never in a fire. 3. The batteries should be replaced when the display intensity becomes significantly reduced.

GETTING CONNECTED

- # Insert the telephone plug into a telephone socket.
- # The majority of modern digital exchanges are now Tone dialling and consequently this telephone has been pre-set to Tone dialling. If you experience any problems contact your Network Operator.

MAKING & RECEIVING CALLS

Handset Operation

- # Lift handset and wait for Dial Tone (the Call Timer commences counting from 0-00).
- # Dial the telephone number (the Display shows number dialled and after 10 seconds call time commences counting).
- # To terminate the call replace the handset.

Hands-free Operation

- # Press the [SPEAKER] button (the red LED light will illuminate).
- # Dial the telephone number.
- # When the called party answers, speak clearly in the direction of the microphone at the front of the telephone.
- # To terminate the call press [SPEAKER] button (the LED light will go off).
- # It is possible to receive a call in the hands-free mode, simply press [SPEAKER] button when the phone rings.

Switching from 'Hands-free' to Handset use

- # Lift the handset.
- # Hands-free mode will be automatically disabled.
- # Replace the handset to terminate the call.

Switching from Handset to 'Hands-free'

Simply, press and hold the [SPEAKER] button and then replace the handset.

MEMORY STORAGE & DIALLING

Your 18 most frequently used numbers (up to 16 digits) can be stored in the memory. 9 at one touch access and 9 at two touch access.

Memory Storage - one touch access

Lift handset or press [SPEAKER] button.

Press and release [STORE] button.

Enter the telephone number.

Press and release memory location button.

Replace handset or press [SPEAKER] button.

Memory storage - two touch access

Lift handset or press [SPEAKER] button.

Press and release [STORE] button.

Enter the telephone number.

Press and release [SHIFT] button.

Press and release [MEMORY] location button.

Replace handset or press [SPEAKER] button.

NOTE: If you are storing successive numbers you must always replace the handset before entering the next number for storage.

Make a note of the name of the owner of the telephone number and its location on the memory index pad.

DIALLING USING MEMORY

One Touch Access

Lift handset or press [SPEAKER] button.

Press the appropriate memory location button.

Two Touch Access

Lift handset or press [SPEAKER] button.

Press and release [SHIFT] button.

Press the appropriate memory location button.

CHAIN DIALLING

Telephone numbers stored in different memory locations can be dialled one after another by simply pressing the appropriate buttons. This feature is useful when accessing electronic banking facilities, where the banks telephone number, your account and pin number are stored in different memory locations.

LAST NUMBER REDIAL

If the number you called is busy or if you want to call the previous number again, simply;

P Lift the handset and wait for Dial Tone.

P Press the [REDIAL] button (item 10 on the diagram on page 1) . The phone will call the last number you dialled.

LCD DISPLAY

Your Audioline TEL35 has a multi-function LCD (Liquid Crystal Display) which indicates:

The current time

The number you are dialling

The duration of both incoming and outgoing calls

Setting the current time

12 Hour Clock P denotes PM, A denotes AM

| WHAT YOU DO | WHAT YOU SEE |
|--|----------------------------------|
| Press set button | The hour digit(s) will flash |
| Press [TIME] button until the correct hour is displayed | |
| Press [SET] button | The minute(s) digits will flash |
| Press [TIME] button until the correct minute(s) is displayed | |
| Press [SET] button | The clock will commence counting |

MUTE

If you wish to talk privately without your caller overhearing, press and hold the [MUTE] button. To resume your conversation with your caller, release the [MUTE] button.

RECALL

The [RECALL] button can be used to access additional PABX facilities. The Audioline TEL35 is pre-set to 100ms Time Break Recall for Australia and 600ms for New Zealand.

PAUSE

For some Network services such as home banking or PABX use, it may be necessary to insert a pause between digits. Use the [PAUSE] button to enter a 3 second pause.

SPEAKER VOLUME CONTROL

When using the telephone in the 'hands-free' mode the volume level of the speaker may be adjusted by using the control on the right handside of the telephone (item 15 on the diagram on page 1)

RINGER CONTROL

To adjust the ringing volume of the telephone, move the switch on the right hand side to either Off-Low-High (item 16 on the diagram on page 1).

ADDITIONAL NETWORK SERVICES

Optional services such as call waiting, call forward etc.,. Can be accessed via the Recall button. *A subsription may apply. For further information contact your Network Operator.*

WALL MOUNTING

The Audioline TEL35 can be wall mounted with an optional bracket (part no. TWB223 not supplied).

When the telephone is wall mounted the handset wall mount clip must be rotated 180 degrees (item 1 on the diagram on page 1).

WARNING

It is recommended that you disconnect your telephone during a thunderstorm as you can get a shock from your telephone (and other electrical appliances). We recommend you follow these simple precautions during a thunderstorm:

- # Do not use your telephone unless the call is urgent.
- # If you must use your telephone, make the call as brief as possible and keep clear of electrical equipment and metal fixtures.
- # Do not stand in bare feet on uncovered concrete floors.
- # Do not touch brick or concrete walls.

NOTE: Do not install your telephone in damp or high humidity locations, such as a laundry or bathroom. If any damage is caused by such elements it is not covered by the manufacturers warranty.

CLEANING

The casing should be cleaned by wiping with a damp cloth.

- # Do not use abrasives, solvents or spray polish that may enter through holes in the earpiece and mouthpiece and cause damage.
- # Do not place the telephone in direct sunlight or use in extreme humidity.
- # Clean the display with a soft dry cloth. Do not push on the display, it can be damaged.

REN

The REN (Ringer Equivalence Number) is of significance only if you wish to connect more than 1 telephone to your telephone line. Your telephone line has a maximum REN capacity of 3. Your Audioline TEL35 has a REN of 1, thus it is feasible to connect 2 more telephones of a value of 1 to your system. You should not exceed a value of 3 on the complete system, otherwise the volume of the ringer in any phone will decrease and one telephone may not ring at all.

GUARANTEE


If you believe your Audioline TEL35 is malfunctioning, please refer to the relevant section and/or consult the troubleshooting guide in this manual to ensure that you have followed the instructions carefully.

The Audioline TEL35 is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault during this period, please contact our Helpline for assistance. If the product is then found to be faulty you will be asked to return it directly to DORO with a copy of the purchase receipt.

DORO Australia Pty Ltd
PO Box 6760
Baulkham Hills BC NSW 2153 Australia

Helpline (02) 8853 8444 Fax: (02) 8853-8489
Email: doro@doro.com.au

NOTE: The guarantee does not extend to damage caused by misuse, negligence, excessive voltage, faults on the telephone line or lightning. This guarantee in no way affects your statutory rights. DORO is the trademark of DORO AB.

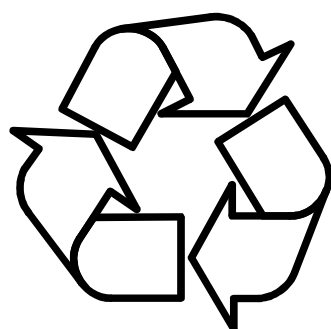

AUDIOLINE®