





## How is a Repeater registered to a Siemens Gigaset C100 base?

Preparation with the C100 handset

1. Select display key "Menu"
2. Scroll thru menu to "Base Settings" option
3. Confirm with display key .
4. Scroll thru menu to "Additional Features" option
5. Confirm with display key .
6. Scroll thru menu to "Repeater Mode" option  
Confirm with key .

Press  key again to turn repeater mode on

The C100 base station and handset are ready for operation

NB: Repeater is not yet connected to power socket.


### Registration procedure for Repeater

1. Plug the Repeaters main plug into the socket for 1 - 5 seconds, then pull it out. Then plug it in again and leave it plugged.

The LED on the Repeater will flash slowly after the start.


2. Press the paging key on the base station, and hold it down for 3 seconds.


The LED on the Repeater will flash rapidly.

3. Press the off-hook key  on the C100 handset (the LED on the Repeater is continuously illuminated now), then enter the Repeater number via the keypad. I.e: Select number 2, 3, 4, 5, 6 or 7

NB: A number must be assigned to the Repeater (Select 2 to 7, for a maximum of 6 Repeaters). Please write down the number, because each number can only be assigned one time, when operating multiple Repeaters. These numbers are independant of the internal numbers of the handset.

The LED on the Repeater blinks the same number of times as the Repeater number entered and then remains continuously illuminated.

4. Press the star key  at the C100 handset to conclude the registration

procedure, then press the on-hook key  .

The repeater is now automatically restarted. The LED goes out for 2 seconds, blinks quickly for a brief moment and then remains continuously illuminated.

## **Activate a signal tone**

The repeater enables you to switch on a verification tone. The verification tone enables the customer to establish whether or not the handset is working in the extended area of the Gigaset repeater. This tone is audible on the activated handset as long as the unit is connected to the Gigaset repeater. Carry out the procedure described below in order to switch the verification tone on and off:

### **Old repeater (version 8 or below)**

To activate: repeat the registration procedure and conclude with the # key instead of the \* key.

### **New repeater (version 9 and above)**

To activate:

- Switch off the unit (disconnect the power plug)
- Switch on for 1 to 5 seconds and switch it off again.
- Switch on again. If the LED on the unit is flashing slowly, switch it off again.
- Switch it on again. The verification tone is then activated or deactivated.

### **Switch off (for both types):**

- Switch off the unit (disconnect the power plug)
- Switch on for 1 to 5 seconds and switch it off again.
- Switch on again. If the LED on the unit is flashing slowly,