


English

8085

Cordless Telephone with Caller ID



User guide

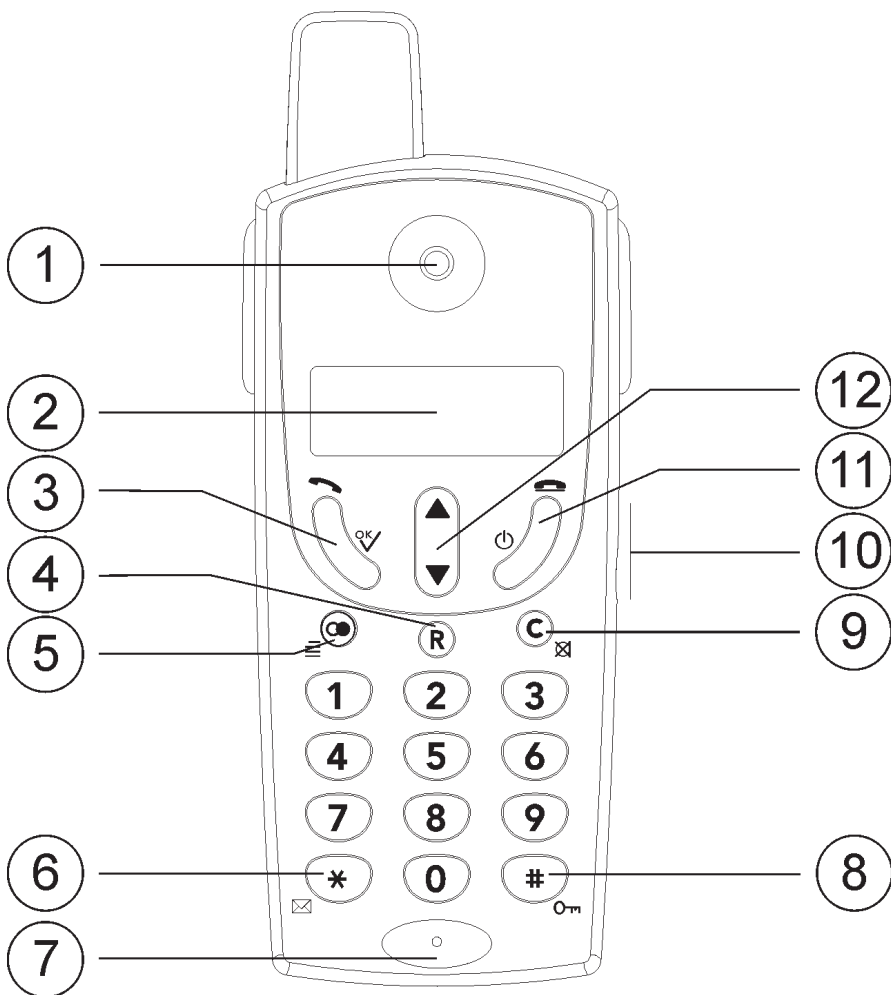

- | | |
|----------------------|---------------------------------|
| 1 Earpiece | 7 Microphone |
| 2 Display | 8 and Key Lock |
| 3 OK/Talk Button | 9 Erase/Mute Button |
| 4 Recall (R) Button | 10 Headset Socket |
| 5 Menu/Redial Button | 11 Disconnect and On/Off Button |
| 6 and Caller ID Log | 12 Scroll Button |

Index

<u>Installation</u>	4	Register a New Hand/ Base Unit	16
Unpacking	4	Reset Handset Defaults.....	16
Connection	4		
Belt Clips.....	5	<u>System Settings</u>	17
Battery	5	Base Unit Signal	17
Turning the handset On/Off	5	Priority Handset.....	17
Battery Charge Indicator	6	PBX Function.....	18
Range	6	Recall Button Timing	19
Headset	6	Emergency Number.....	19
The Display.....	7	Call Barring (Call Block)	20
Base Unit Indicators	7	Least Cost Routing	21
		Type of Caller ID	22
<u>Operation</u>	8	Time and Date	22
Making a Call.....	8	Base Unit PIN Code	22
Receiving a Call.....	8	Deregister a Handset.....	23
Redial Button	8	Reset Base Unit Defaults ...	23
Temporary Silent Mode	8	Show IPEI Number	23
Volume Control	9		
Mute Button	9	<u>Expanded System</u>	24
Handset Paging	9	General Information.....	24
Key lock	9	Multiple Base Units.....	24
Timer.....	9	Multiple Handsets	25
Optional Network Services.	9	Placement of Base Units	25
		Intercom Function.....	25
<u>Menu</u>	10	Transferring Calls	
		Between Handsets	26
<u>Memory</u>	11	Conference	26
<u>Caller Identification</u>	12	<u>Other</u>	27
		Troubleshooting	27
<u>Settings</u>	14	Notes/Guarantee for UK.....	28
The Handset Ringer	14	Notes/Guarantee for Australia, New Zealand	29
Button Click	14	Declaration of conformity ...	31
Display Information.....	14		
Auto - Answer	15		
Select Base Unit.....	15		
Handset PIN Code.....	15		


Installation

Unpacking




The package should include the following items:

- Handset
- Base unit
- Battery
- Mains adapter
- Line cord
- Belt clip

The 8085+1 also include an additional handset and a charger with adapter.



Connection

1. Connect the mains adapter to the  socket of the base unit and to an electrical wall socket.
2. Remove the battery cover from the back of the handset. Insert the battery plug and fit the battery into the handset. The battery cable should be placed according to the image above. Replace the battery cover.
3. Place the handset in the base unit, with the keypad facing *outwards*. Once the handset is correctly placed in the base unit, a beep will be heard and the charge indicator  will illuminate on the base unit.
4. Charge the handset battery without interruption for 12 hours initially (thereafter the charging will take up to 8 hours).
5. Connect the telephone line cord to the socket marked  on the base unit and plug into the telephone network socket (using adapter plug if required).

Only for versions with an additional handset (8085+1)!

6. Connect the mains adapter to the charger and to an electrical wall socket.
7. Place the handset in the charger with keypad facing *outwards*.

IMPORTANT!

Under power failure conditions, this telephone will not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

The earpiece of the handset may attract small ferromagnetic objects such as staples and pins, care should be taken when placing the handset near these items.

Do not place the base unit in areas of high humidity or where it will be exposed to direct sunlight or other major heat sources.

Installation


Belt Clips

A belt clip is included, which can be fitted on the back of the handset. The belt clip enables the handset to be attached to a belt, waistband or similar. To attach the clip, press it in place over the back of the handset. On either side of the handset, there are indents for the clips to clasp onto.

Battery

The telephone comes supplied with an environmentally friendly nickel metal hydride (NiMH) battery. As with all batteries performance may degrade over time, should you notice that the standby time has reduced considerably or there are signs of leakage, the battery pack should be replaced.

A fully charged battery will last for approx. 80 hours in standby or approx. 7 hours call time. These operation times apply at normal room temperature.

A completely discharged battery will take about 8 hours to fully recharge. Please note that the charge indicator  in the base unit display is on while charging and will flash when the battery is fully charged.

The base unit has an automatic charging mechanism that prevents the battery from being overcharged or damaged due to prolonged charging.

IMPORTANT!


When the telephone is installed for the first time, the battery must be charged for 12 hours before using the telephone.

Use only DORO original batteries. The guarantee does not cover any damage caused due to incorrect batteries being installed.

The handset is charged with the key set facing outwards.



Please dispose of any batteries in a responsible and environmentally friendly manner.

Turning the handset On/Off

Press and hold the  button for a few seconds to turn the handset off or on. When the handset is turned off, no calls can be made or received. The handset is designed to be always turned on, i.e. it is not necessary to turn it off over night. However, we recommend turning the handset off if it is not to be used for a prolonged period of time, e.g. during a holiday. If the battery runs low, the handset will automatically turn off due to inadequate voltage.

Installation

Battery Charge Indicator

The symbol  in the display indicates when it is time to recharge the battery. The symbol has three segments, which disappear as the battery charge decreases. When the battery is running low, the symbol  will appear in the display and a warning tone will be heard. If the handset is not recharged at this time, the phone will cease to function until it is recharged.

Range

The range of the telephone varies depending on various factors in the surrounding environment. The radio waves transmitting the call may be hindered by obstructions, reducing the range.

Specified ranges require an unobstructed transmission between the handset and the base unit. In such ideal conditions, the telephone range can be up to 300 metres. In a densely populated area, house, apartment, etc. the range of the telephone will be reduced. Try to get the best range by relocating the base unit. The ideal location for the base unit is a high and unobstructed place.

IMPORTANT!

To reduce the risk of possible interference please do not locate the base unit near any electrical equipment e.g. TV's, computers, fridges, telecom equipment etc or close to radiators, metal pipes or window frames. Also ensure the base unit is not exposed to direct sunlight, excessive heat, damp or high humidity locations.

Out of range warning

If, during a call, the handset is carried too far from the base, a warning tone will be heard from the handset. Unless the handset is moved closer to the base unit within a few seconds, the call will be lost.

Headset


When using an optional headset, there is no change in the way a call is received or made. When a headset is connected, the microphone of the handset will automatically be disconnected. This telephone supports the use of a talk button on the headset cable.








Please note!

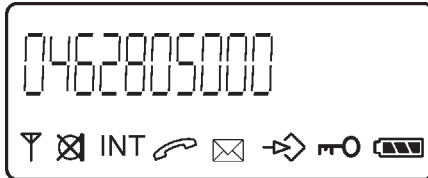The performance of a non-original DORO headset cannot be guaranteed.



Installation

The Display





Indicator	Function
	Shown within range of the base unit. Flashes when out of range.
	Microphone muted.
INT	Intercom call or base unit menu.
	Indicates that a call is connected. Flashes when the phone rings.
	New number/s in Call ID log.
	Menu/Programme button.
	Call Block
	Battery charge indicator.

Base Unit Indicators

	On when a call is connected, flashes on incoming calls, or to indicate that new numbers have been received and stored in memory.
	On while battery is being charged, flashes when fully charged.


Making a Call

1. Enter the required number. Mistakes can be erased using **C**.
2. Press , and the number will be dialled.
3. Press  to terminate the call.

Please note!


If the telephone cannot connect to a line, a warning tone will be heard. The problem may be due to the battery running low, the handset being too far from the base unit or all of the transmission channels being engaged.

Receiving a Call

1. Wait for the handset to ring.
2. To receive the incoming call, press any button but do NOT press **C**.
3. Press  to terminate the call.





Redial Button

The five most recently dialled numbers can easily be redialled using **☎**:

1. Press **☎** repeatedly, to browse through the dialled numbers
2. Press  to dial the selected number.

Temporarily Saving a Number While Calling

A phone-number can be stored temporarily in the redialling memory.

1. While a call is in progress.
2. Press and hold  until PHONE LIST is shown.
3. Scroll to . Press .
4. Enter the desired number. Press .
5. The number has now been stored in the redial memory and can be automatically dialled using **☎**.

Temporary Silent Mode

On an incoming call, press **C** to turn the ringer temporarily off. This would be useful when in a business meeting. On the next incoming call, the handset will ring as usual.

Operation

Volume Control

The earpiece volume may be adjusted during a call using ▲/▼.


Mute button

The microphone can be muted during a call by pressing the mute button ☒.

Press the mute button again to re-activate the microphone.

The display shows ☒ as long as the function is active.

Handset Paging

Pressing ≡ on the base unit will activate the paging signal of the handset. This function is used to help locate the handset or to page the person carrying the handset. The signal will stop automatically after a while or if the  button on the handset is pressed. The page can also be cancelled by pressing ≡ on the base again.

Key lock

This function locks the push buttons on the handset to prevent unintentional usage.

1. Press **0m** until the display shows PRESS 19.
2. Deactivate the key lock by pressing **19** or holding down **0m**.

The key lock is also deactivated when the handset is being charged. Calls can still be received, even if the key lock is active. When the call is finished, the handset returns to locked mode.

Timer

Following the connection of a call, a timer is shown on the display. The timer helps you keep track of how long the call lasts.

Recall

Press the recall button **R** followed by the extension number to transfer calls when connected to a PBX (TBR only).






Access to additional network services can be gained by using the recall button **R**, **☒** and **☐** keys. Contact your network operator for more information.

Menu

Description of the menu system

The telephone has an easy menu system with display texts.

The following buttons are used to operate the menu system:

-  Access menu system.
-  Used to scroll through the menus.
-  Confirms selected option.
-  Used to erase/correct.
-  To exit the selected menu, or to select standby mode (by holding the button down).

The menu contains the following main headings:

MEMORY (PHONE L ISTE SELE) Under this heading you can store, change or erase your speed-dial numbers.

CALLER ID (☒ ID) Displays a list of the most recently received numbers. The ☒ button takes you here directly from standby mode.

INTERCOM CALL (INTE CALL) Used to call other handsets.

SETTINGS (SELE INCS) Settings for ring signal, PIN code, button click, etc.








Memory

Memory Usage




This telephone has 20 speed-dial memories (00-19).

A stored phone number can be dialled using fewer keystrokes than if dialled manually.

Storing Numbers

1. Press  until PHONE LIST SET is shown.
2. Press .
3. Enter memory location **00-19**, or scroll using /.
4. Enter the telephone number (up to 24 digits), including the area code. Use **C** to erase or change.
5. To store more numbers, press /, or press  to save.

Calling Using Speed dialling

1. Scroll through the speed-dial entries using /. You can also enter the memory location **00-19** directly when the display shows _ _.
2. Press , and the number is dialled.

Press  if you want a pause in the telephone number.

In case of a number change, store the new number in the location of the old one.

Caller Identification

Explanation of Caller ID

Caller ID allows you to see who is calling before you answer a call, and to see who has called in your absence.

Numbers received are logged with date and time, and can easily be retrieved for viewing or dialling. The call log will store up to 39 telephone numbers. For the setting of time/date, see page 22.



New calls are indicated in standby mode by a ☒ in the display.

When the log is full, the oldest number will be deleted automatically, as the new call is logged.

Please note!

In order for numbers to be shown, the Caller ID service must be provided by your network operator and a current subscription in place. Contact your operator for more information.

Retrieving and Dialling Incoming Numbers

1. Hold ☒ until the display indicates the number of new entries (㊦), and the total (㊦㊦) number of numbers stored in the call log.
2. Scroll to selected entry.
3. After a short while, the date and time logged for the entry will be shown, provided time/date has been set.
4. Press  to dial the number or  to return to standby mode.



Messages

Besides showing telephone numbers, the display may also show a number of messages.



OUT OF AREA	It is an International call or a call from a PBX (no information received)
SECRET	The call is from a private or blocked number.
INFO or ㊦㊦	There is a message waiting; this information is available only with compatible network service.

Caller Identification



Removing Numbers.

1. Hold  until the display indicates the number of new entries (nE), and the total (tEt) number of numbers stored in the call log.
2. Scroll to selected entry.
3. Press **C**. The display will show ERASE.
4. Press  to confirm.

Erasing All Seen (i.e. Old) Numbers.

1. Hold  until the display indicates the number of new entries (nE), and the total (tEt) number of numbers stored in the call log.
2. Hold **C** until ERASE ALL is shown.
3. Press  to confirm.







Transferring Numbers to Memory

1. Press  until the display indicates the number of new entries (nE), and the total (tEt) number of numbers stored in the call log.
2. Scroll to preferred entry.
3. Press  until a beep is heard. The display will indicate the memory location allocated before returning to numbers received.

Settings







The Handset Ringer

There are a number of settings for the volume (BELL LOUD) and melody (BELL TYPE) of the handset ringer.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to HANDSET. Press .
4. Scroll to BELL. Press .
5. Scroll to BELL TYPE or BELL LOUD. Press .
6. Scroll to preferred setting.
7. Press  to save settings.






Button Click

The sound heard when the buttons are pressed can be turned off or on.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to HANDSET. Press .
4. Scroll to BELL. Press .
5. Scroll to BEEP. Press .
6. Scroll to preferred setting (OFF/ON).
7. Press  to save settings.

Display Information






In standby mode, the handset can be set to display the call number of the handset (HS) as well as the number of the base unit (BS) in use.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to HANDSET. Press .
4. Scroll to BS-d ISP or HS-d ISP. Press .
5. Scroll to preferred setting (OFF/ON).
6. Press  to save settings.

Settings






Auto - Answer

With this function activated, incoming calls will be received (the call connected) when the handset is lifted from the base unit.

1. Press  until PHONE L ISE SET is shown.
2. Scroll to SEEt InCS. Press .
3. Scroll to HAndSEt. Press .
4. Scroll to AUtO ACCePt. Press .
5. Scroll to preferred setting (OFF/On).
6. Press  to save settings.






Select Base Unit

You can decide which base unit you wish the handset to communicate with. You can also set the handset to automatically select the base unit with the best connection.

1. Press  until PHONE L ISE SET is shown.
2. Scroll to SEEt InCS. Press .
3. Scroll to HAndSEt. Press .
4. Scroll to SELEct bS. Press .
5. Select a base unit by pressing the corresponding number button (0=automatic). The selected number will flash within the display.
6. Press  to save settings.

Handset PIN Code

The handset PIN code is a four-digit code that you can set yourself. It protects against unauthorised use of certain functions.

1. Press  until PHONE L ISE SET is shown.
2. Scroll to SEEt InCS. Press .
3. Scroll to HAndSEt. Press .
4. Scroll to HS-P In. Press .
5. Enter the present PIN code (0000 at default).
6. Enter the new code, twice.
7. Press  to save settings.

Settings







Register a New Handset or Base Unit

To enable the use of more than one handset a registration has to be performed. Every new handset must be registered in order to use a base unit. A maximum number of 4 base units can be registered with each handset, and each base unit can handle up to 6 handsets.

On registration, the handset is allocated a handset number from 1-6.






Additional base units and handsets can be purchased from your local retailer.

See also page 24 for more information about Expanded Systems.

1. Hold the paging button  on the base unit down for a few seconds until it beeps. Registration mode will remain active for about 30 seconds.
2. Press  until PHONE LIST SET is shown.
3. Scroll to SEET INCS. Press .
4. Scroll to HANDSET. Press .
5. Scroll to REG ISTER. Press .
6. Select a base number for the base unit you wish to register by pressing the corresponding number button 1-4.
7. Enter the base unit PIN code (0000 at default). Press .
8. After a few seconds (no more than 90) unused handset numbers are displayed. Select one of these by pressing the corresponding number button.
9. If the registration is successful, the handset will return to standby mode in a few seconds. The new handset number is shown on the right of the display.

Reset Handset Defaults

You can reset most of the functions and settings of the handset (DEFAULT SET) or just the redial log (ERASE RED IAL). Resetting does not affect registrations or speed-dial numbers.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SEET INCS. Press .
3. Scroll to HANDSET. Press .
4. Scroll to DEFAULT SET or ERASE RED IAL. Press .
5. Enter the handset PIN code (0000 as default).
6. Confirm by pressing .

System Settings

Base Unit Ringer

There are a number of settings for the volume (BELL LOUD) and melody (BELL TYPE) of the base unit ring signal.

1. Press **≡** until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press **✓**.
3. Scroll to BASE. Press **✓**.
4. Scroll to BELL. Press **✓**.
5. Scroll to BELL TYPE or BELL LOUD. Press **✓**.
6. Scroll to preferred setting.
7. Press **✓** to save settings.

Priority Handset

This function allows you to decide whether, on incoming calls, all handsets should ring at once or if one handset should start ringing before the others (i. e. have priority).

1. Press **≡** until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press **✓**.
3. Scroll to BASE. Press **✓**.
4. Scroll to BELL. Press **✓**.
5. Scroll to PR OR HYS. Press **✓**.
6. Select which handset is to have priority by pressing the corresponding number button (0=no priority).
7. Press **✓** to save settings.

Number of Rings

With the handset priority function activated, you can decide how many rings it takes before the other handsets ring.

1. Press **≡** until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press **✓**.
3. Scroll to BASE. Press **✓**.
4. Scroll to BELL. Press **✓**.
5. Scroll to RING COUNT. Press **✓**.
6. Select the preferred number of ring signals before all handsets start to ring.
7. Press **✓** to save settings.







System Settings

PBX Function

This telephone has a PBX function that allows you to specify an external call prefix. When you dial an external number, the phone will detect that the number starts with the prefix, and will automatically insert a pause before dialling the actual number. The telephone can handle external line prefixes of up to 4 digits.

An example of use of the PBX function:







“9” has been specified as the external line prefix. If a call is made to the number “9123456”, the phone will dial: “9” followed by a pause while the external line is connected, and then the rest of the number: “123456”. It makes no difference if the number is dialled manually, or using speed dialling. Numbers not starting with “9” (in this example) will be dialled as usual, without any pauses.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to BASE. Press .
4. Scroll to dial. Press .
5. Enter the base unit PIN code (0000 at default).
6. Scroll to ACCESS CODE. Press .
7. Enter the prefix. Use **C** to erase or change.
8. Press  to save settings.

System Settings









Recall Button Timing (business use only)

In some advanced PBX system installations the timing of the R button may need to be adjusted. In normal domestic use, this setting should normally not require changing.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SEET INCS. Press .
3. Scroll to BASE. Press .
4. Scroll to d IRL. Press .
5. Enter the base unit PIN code (0000 at default).
6. Scroll to RECALL. Press .
7. Select preferred setting (1=100, 2=270, 3=600 ms).
8. Press  to save settings.

Emergency Numbers






Three emergency numbers can be specified to be excluded from the call block function. The phone is delivered with some emergency numbers pre-set.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SEET INCS. Press .
3. Scroll to BASE. Press .
4. Scroll to d IRL. Press .
5. Enter the base unit PIN code (0000 at default).
6. Scroll to SOS SET. Press .
7. Scroll to selected entry.
8. Enter the emergency number (up to 12 digits). Use **C** to erase.
9. To store more numbers, press /, or press  to save.

System Settings








Call Barring(Call Block)

The telephone can barr various kinds of outgoing calls. You can either barr all outgoing calls (bLÖC ÖutÖÖ InÖ) or barr certain numbers (bLÖC nr), as described below.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SEtE InÖS. Press .
3. Scroll to bASE. Press .
4. Scroll to CALL bLÖC. Press .
5. Enter the base unit PIN code (0000 at default).
6. Enter the handset number to which the barr shall apply by pressing the corresponding keypad button.
7. Scroll to preferred setting.
8. Press  to save settings.

Enter Numbers to be Barred (bLÖC nr)

Enter the sequence of digits for the type of call to be barred. E. g. select the international prefix (usually 00) to barr all international calls. Three different barrs of up to eight digits each may be programmed.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SEtE InÖS. Press .
3. Scroll to bASE. Press .
4. Scroll to SEt bLÖC nr. Press .
5. Enter the base unit PIN code (0000 at default).
6. Select a memory location (0-2).
7. Enter number to be barred (up to 8 digits). Use **C** to erase or change.
8. To store more numbers, press /, or press  to save.
9. Please ensure that bLÖC nr is activated, see description on top of this page.

System Settings

Least Cost Routing (LCR)

This function will automatically select the telephone network operator of choice. The telephone can be set up to add digits to and/or replace certain digits in telephone numbers.

To choose a certain network operator, you would normally dial a prefix code before the actual phone number.









Example:

You have chosen a certain operator for international calls. In order to place your calls with this operator you must dial, for example 9502 before the international dialling code. You can set up the LCR function so that whenever you dial a number beginning with 00, the phone will automatically change this to 950200. For example: the number 0046 46 2805000 would automatically be dialled 9502 0046 46 2805000

Please note!

In order to place your call with a certain operator you must be a registered subscriber. A maximum of two LCR set-ups can be active.

Setting Up an LCR number

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to BASE. Press .
4. Scroll to LCR SET. Press .
5. Enter the base unit PIN code (0000 at default).
6. Select one of the two settings.
7. Enter sequence to be replaced (up to five digits, e. g. 00). Use **C** to erase or change. Press .
8. Enter sequence to be added (up to ten digits, e. g. 950200). Press .
9. Select preferred setting (OFF/ON). Press .
10. Store more numbers or return to menu system using .

Automatic network prefix using LCR

Leaving the field for sequence to be replaced empty (point 7 above) causes the telephone to dial all numbers with the added sequence (point 8 above).

System Settings

Type of Caller ID (CID)

In some advanced PBX system installations the CID settings may need to be adjusted. Normally, this setting need not be changed. If you are unsure as to the correct setting for your installation initially select FS = FSK.

1. Press **≡** until PHONE L SET SET is shown.
2. Scroll to SEET INCS. Press **↵**.
3. Scroll to BASE. Press **↵**.
4. Scroll to C ID TYPE. Press **↵**.
5. Select the proper setting (FS=FSK, dt=DTMF).
6. Press **↵** to save settings.

Please note!

The calling number will not be displayed if the incorrect setting is selected.

Time and Date

Each incoming phone number in the CID log is time-stamped. The time/date will be updated automatically from the network each time a caller-id is received.

1. Press **≡** until PHONE L SET SET is shown.
2. Scroll to SEET INCS. Press **↵**.
3. Scroll to BASE. Press **↵**.
4. Scroll to DATE-E INE. Press **↵**.
5. Enter date (DD MM YY). Press **↵**.
6. Enter time of day (HH MM). Press **↵** to save settings.

Base Unit PIN Code

The base unit PIN code is a four-digit code that you can set yourself. It protects against unauthorised use of certain functions.






1. Press **≡** until PHONE L SET SET is shown.
2. Scroll to SEET INCS. Press **↵**.
3. Scroll to BASE. Press **↵**.
4. Scroll to BS-P IN. Press **↵**.
5. Enter the present PIN code (0000 at default).
6. Enter the new code, twice.
7. Press **↵** to save settings.

System Settings

Deregister a Handset

Any additional handset can easily be de-registered from a base unit.

De-registration means that the handset number of the selected handset is erased from the list of registered handsets.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to BASE. Press .
4. Scroll to DE-REG. Press .
5. Enter the base unit PIN code (0000 at default).
6. Select the handset to be de-registered by pressing the corresponding number button.
7. Confirm by pressing .






WARNING!

Do NOT deregister the the main handset (handset 1).

Reset Base Unit Defaults





Resetting will return most base unit functions and settings to default.

Registrations are not affected by resetting.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to BASE. Press .
4. Scroll to DEFAULT SET. Press .
5. Enter the base unit PIN code (0000 at default).
6. Confirm by pressing .

Show IPEI Number

Each handset has a unique ID number, which may be used for registration with other base unit models.

1. Press  until PHONE LIST SET is shown.
2. Scroll to SET INCS. Press .
3. Scroll to HANDSET. Press .
4. Press **R** until the display shows the IPEI number.
5. Press  to return to standby mode.

Expanded System

General Information

DECT (Digital Enhanced Cordless Telephone) technology offers superior performance, clarity and security using its completely digital method of transmission.

You can:

- Use up to 6 handsets with the same base unit.
- Use (register) up to 4 base units with the same handset.
- Make internal calls (intercom) and transfer calls between handsets using the same base unit.

Additional base units and handsets can be purchased from your local retailer.

This model is GAP (Generic Access Profile) compatible, which means that the handset and the base unit can both be used with most other GAP compatible units irrespective of manufacturer.

Multiple Base Units

By connecting several base units to the system, the useful range for the handset can be expanded. Registering multiple base units with the handset will cause the handset to automatically connect to another base if and when it loses contact with the current base unit. Another practical application could be to have one base station at home and one at work. Then the same handset can be used in both places.

The handset remains in contact with its base unit until it goes out of range. When this happens, the handset will begin to search for another base from its list of registered base units.

It is essential that the range of the base units overlap in order to achieve uninterrupted coverage. The transfer from one base unit to another will then be automatic, however, this will not occur while a call is in progress.

More about placement of the base units on the next page.

IMPORTANT!

Automatic switching between base units (handset handover) will not occur while a call is in progress.

Expanded System

Multiple Handsets

The combination of multiple base units and multiple handsets provides for many useful applications.

- Any of 6 handsets can answer incoming calls and make outgoing calls.
- External calls can be transferred between handsets.
- Internal handset to handset communication (intercom).
- The system allows for conference calls where two handsets can communicate with an external caller at the same time.




Placement of Base Units


If you wish to use several handsets with one base unit, you should make sure that the base unit is placed “in the middle”, so that the range will be evenly divided among the handsets.

If you wish to use several base units to achieve an extended coverage within a specific area, e. g. a large home or office, a storage area, etc. then it is important that the range of the base stations overlap. If not, there may be reduced communication in certain areas where the handsets have no signal from the base units.

Intercom Function

When using several handsets with the same base unit, calls can be made internally between the handsets, referred to as internal calls, or intercom. Internal calls can only be made between handsets connected to the same base unit





1. Press  until PHONE LIST SET is shown.
2. Scroll to INT CALL. Press .
3. Press  for a general call (to all handsets) or enter the handset number **1-6** of the handset you wish to call.

Should an external call come in while an internal call is in progress, a tone will be heard and the  symbol flash. Receive the external call by pressing **R**.

Expanded System

Transferring Calls Between Handsets





An external call can be transferred from one handset to another (they must both be using the same base unit).


1. While an external call is connected on line.
2. Press and hold  until PHONE LIST SET is shown.
3. Scroll to INT CALL. Press .
4. Press  for a general call (to all handsets) or enter the number **1-6** of the handset to which you wish to transfer the call.
5. During this time, the external call will be on hold. The other handset receives the call as it normally would, and you can talk internally.
6. To transfer the external call, press  on the calling handset.

If you decide not to transfer the call, press **R** on the calling handset to return to the external caller.

Conference

It is possible to have a conference call between two handsets and an external caller.

1. While an external call is connected on line.
2. Press and hold  until PHONE LIST SET is shown.
3. Scroll to INT CALL. Press .
4. Press  for a general call (to all handsets) or enter the number **1-6** of the handset you wish to include in the conference call.
5. During this time, the external call will be on hold. The other handset receives the call just as it normally would, and you can talk internally.
6. To connect all three parties in a conference call, press and hold  until you hear a beep.

By pressing  any one of the handsets can terminate the conference and let the other continue the conversation with the external party.

Other

Troubleshooting

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment that may be connected. If the problem is resolved the fault is with the other equipment.

Test the equipment on a known working line. If the product works then the fault is with the line.

If you are still experiencing difficulties, refer to page 28 or 29.

No Number Shown In Display When Ringing

- In order for this feature to work properly, you must subscribe to the Caller ID service from your network provider.
- If the display shows □□□ □□ □□□□, the call may be from a PBX or an international call (no data received).
- If the display shows □□□□□□, the call is from a private or blocked number. It may not be possible to receive CID information if the phone operates in a PBX system. Please refer to page 22.

No Call Handover When Moving Between Base Units

- The switching (or handover) of the handset/s between base units is not possible when on a call. Handsets will search for new base units only:
 - when out of range from the original base.
 - while in standby mode.

Warning Signal When Talking/Cannot Connect

- The batteries may be running low (recharge the handset)
- The handset may be (nearly) out of range. Move closer to a base unit.

Telephone Does Not Work

- Check if the handset is turned on.
- Check the adapter, is it correctly connected to the base unit and to the mains power?
- Check that the telephone cord has been correctly connected to the base unit and to the line socket, by disconnecting and reconnecting both ends.
- Check the charge status of the handset battery.
- Try connecting another telephone, known to be in working order, to the line socket. If that phone works then it is likely that this equipment is faulty.

UK

If you cannot resolve the fault using the faultfinder section, technical support is available on the **Premium Rate Number: 0906 302 0114**.

Calls cost **50 pence per minute** (prices correct at the time of going to press), and is operational between 9AM - 5PM Monday-Friday excluding Bank Holidays. Alternatively,

You can contact us in writing: Consumer Support Group, Doro UK Ltd., 22 Walkers Road, North Moons Moat, Redditch, Worcestershire, B98 9HE, (regarding any Spares or Technical query), or
Telephoning Spares: 01527 584377

E-mail on: tech@doro-uk.com

Web site: www.doro-uk.com

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. Proof of purchase is required for any service or support required during the guarantee period.

This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage or any other circumstances on the purchaser's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or any other voltage fluctuations.

This guarantee does not in any way affect your statutory rights. (As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm.)

Other

Australia and New Zealand

If you believe this product is malfunctioning, please refer to the relevant section and/or consult the troubleshooting guide in this manual to ensure that you have followed the instructions carefully. As an alternative you can visit our web site for FAQ's or send an e-mail for a prompt reply.

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. Should you experience difficulties with the product, please contact us for assistance. If the product is then found to be faulty you will be asked to return it directly to us with a copy of the purchase receipt.

This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress negligence, abnormal usage or any other circumstances on the purchaser's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or lightning, excessive or any other voltage fluctuations or faults on the telephone line. (As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm). This guarantee does not affect your statutory rights.

AUSTRALIA

DORO Australia Pty Ltd
PO Box 6760
Baulkham Hills BC NSW 2153
Australia

Consumer Support

Ph: (02) 8853 8444
Fax: (02) 8853-8489
Email: support@doro.com.au
Web site: www.doro.com.au

NEW ZEALAND

Atlas Gentech (NZ) Limited
Private Bag 14927
Panmure
Auckland
New Zealand

Consumer Support

Ph: 0900 50-025 (Toll Call)
Fax: (09) 574-2722
Email: support@atlasgentech.co.nz

REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

Notes for operation in New Zealand

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service. This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

DECLARATION OF CONFORMITY

WE DORO AB
Of SKIFFERVÄGEN 80
SE-224 78 LUND
SWEDEN

AS THE EU/EES/EC/EEA AUTHORISED REPRESENTATIVE DECLARE
UNDER OUR SOLE RESPONSIBILITY THAT THE PRODUCT

MODEL: 8085
DESCRIPTION: CORDLESS PHONE

IS IN CONFORMITY WITH DIRECTIVE: 1999/5/EC

Authorised by:

Signed

Name (printed): PETER CULLIN
Position in company: R&D MANAGER
Date of issue:2001-06-19

Copies of this document will be held on file for a period of 10 years after the last production.



Supplier: DORO AB, Skiffervägen 80, SE-224 78 LUND, SWEDEN
Product: 8085

This product is intended for connection to analogue PSTN lines within the following countries: France, United Kingdom, Switzerland, Sweden, Norway, Denmark and Finland.

However, due to differences between the individual PSTN's provided in the different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point.

ADDITIONAL INFORMATION

Tone-dialling only.

In the event of a mains power failure it will not be possible to dial emergency services numbers.

